



Eagle Display

Calibration Set Points:	
1 - Ground	(Zero Set Point)
2 - Indication of Impending STALL	(CAA)
7 - Optimum Alpha Angle (OAA)	(1.3 x Vs)
14 - Cruise Alpha	(Va or Maneuvering Speed)

