



Calibration Set Points:

Ground	(Zero Set Point)
Critical Alpha Angle (CAA)	(Stall)
Optimum Alpha Angle (OAA)	
Cruise Calibrated @ (MAA)	(V _a)



Merlin Display
display shown with all segments illuminated

Alpha (Angle of Attack)